

Level 0
0 - <10 min

Level 1
10 - 30 min

Level 2
30 - 60 min

Level 3
60 - 120 min

Level 4
120 - 240 min


Level 5
240 - 480 min

Level 6
< 480 min

SHIELDskin XTREME* White Nitrile 300 DI++



0120

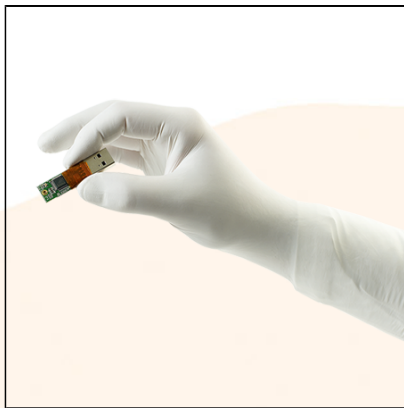

- Category III PPE glove (PPE Directive 89/686/EEC)
- Complex Design - For mortal & irreversible risks
- Powder-free white nitrile glove
- Ambidextrous
- 300 mm / 0.14 mm (EN 420:2003 + A1:2009)
- AQL 1.5 (EN 374-2:2014 Level 2)
- Viral penetration test (ISO 16604:2004 Procedure B & ASTM F1671-97b)
- Waterproof and for low chemical protection
- Tested for chemical permeation (EN 16523-1:2015 supersedes EN 374-3:2003)
- Typical particle levels: less than 650 per cm² more or equal 0.5µm
- Tested according to EN 1149-1-2-3 & 5
- Type I hypersensitivity eliminated - Type IV hypersensitivity reduced
- Accelerator-free glove

7664-93-9
Sulphuric acid 50%

LEVEL 6
480 min

75-59-2
Tetramethylammonium hydroxide 2.5%

LEVEL 6
480 min

1310-58-3
Potassium Hydroxyde 40%

LEVEL 6
480 min

1310-73-2
Sodium Hydroxide 40%

LEVEL 6
480 min

7722-84-1
Hydrogen Peroxide 30%

LEVEL 6
480 min

1239-45-8
Ethidium bromide 5%

LEVEL 6
480 min

7647-01-0
Hydrochloric Acid 37%

LEVEL 4
134 min

67-63-0 Isopropanol 70%	LEVEL 3 88 min
67-63-0 Isopropanol 100%	LEVEL 3 62 min
79-06-1 Acrylamide 40%	LEVEL 6 480 min
64-17-5 Ethanol 70%	LEVEL 2 35 min
64-17-5 Ethanol 99.8%	LEVEL 1 20 min
7664-39-3 Hydrofluoric Acid 40%	LEVEL 1 13 min
67-56-1 Methanol 99,9%	LEVEL 0 7 min
1336-21-6 Ammonium Hydroxide 25%	LEVEL 2 32 min
1330-20-7 Xylene 98,5%	LEVEL 0 1 min